

Amazon Fire Tablet Basics



Tablet Buttons and Cameras



Your tablet has a number of buttons location on it's outer edge.

Your tablet also has two camera's. One on the front where the screen is and another on the back.

Here is a closer look at the location of your two cameras.

Cameras



Front-facing camera



Rear-facing camera

Here is a closer look at some of the buttons and ports located on the bottom edge of your tablet.

Bottom of Tablet



Power button: Clicking this will turn your screen on and off. Holding it down for longer will shut down your tablet completely or turn it back on.

Charging port: This is where you will plug in your tablet charger.

Microphone: This is what picks up sound when you are talking on video calls, do not cover this or your sound will be muffled

Headphone jack: You can plug in headphones here if you have them.

Volume buttons: Control the sound coming out of your device, making it quieter or louder.


Unlocking Your Tablet




When you first turn on your device you will see this screen. This is the Lock Screen. Use a finger to swipe up on the screen to unlock it.

Home Page

- This is the home page of your tablet. Here is where you can access all your apps.
- To open one of the apps on your screen, all you have to do is tap it with your finger.
- If you do not see the app you want on this screen you can either:
 - Use the search bar at the top to look for it.
 - Swipe up on the screen to reveal more apps.

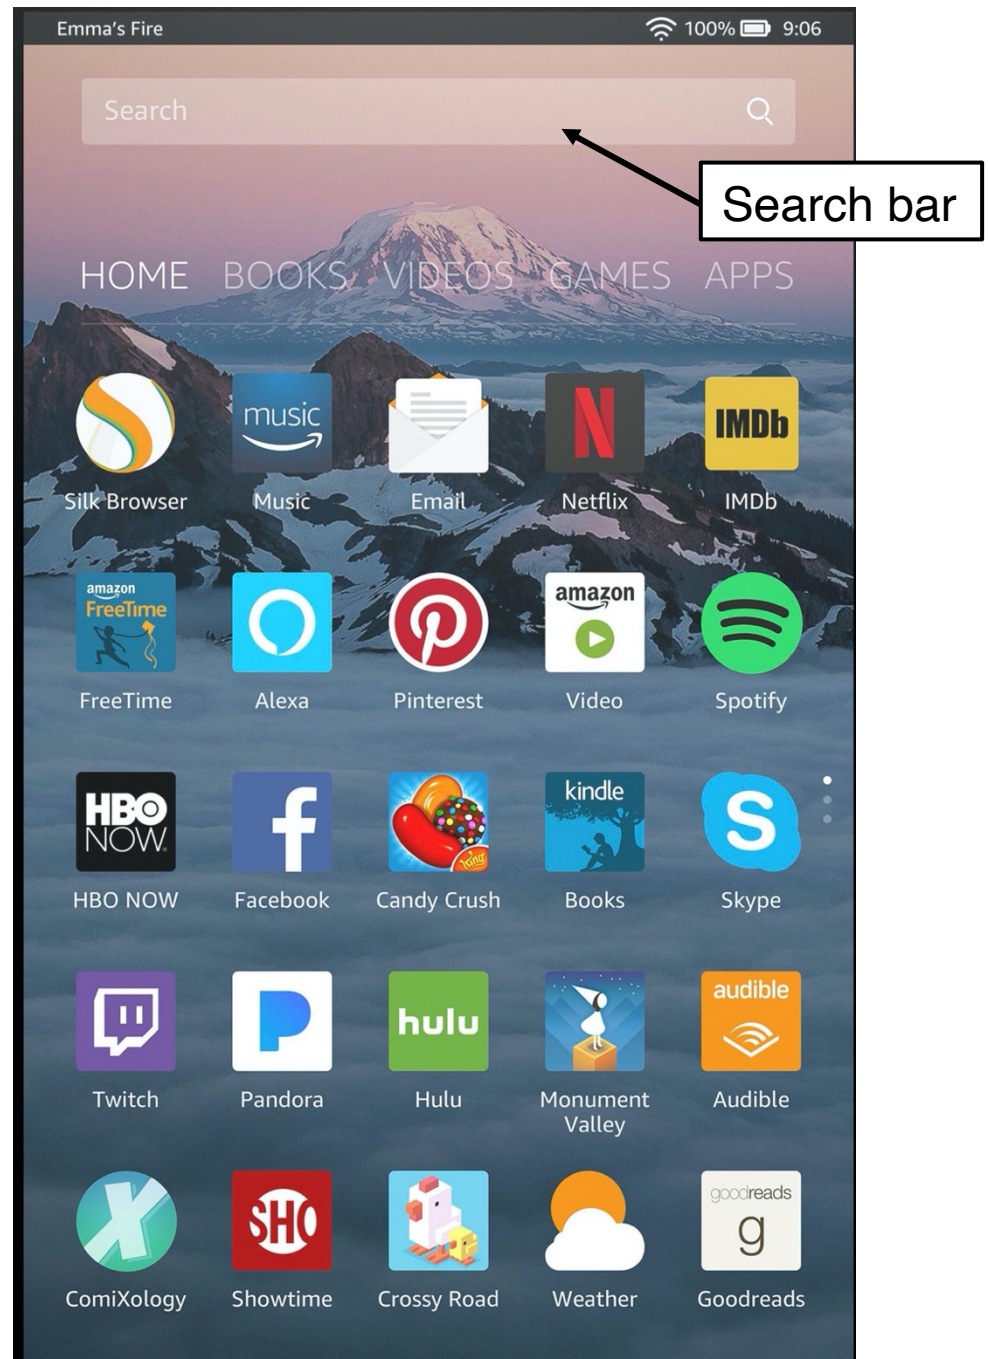

Navigation Buttons

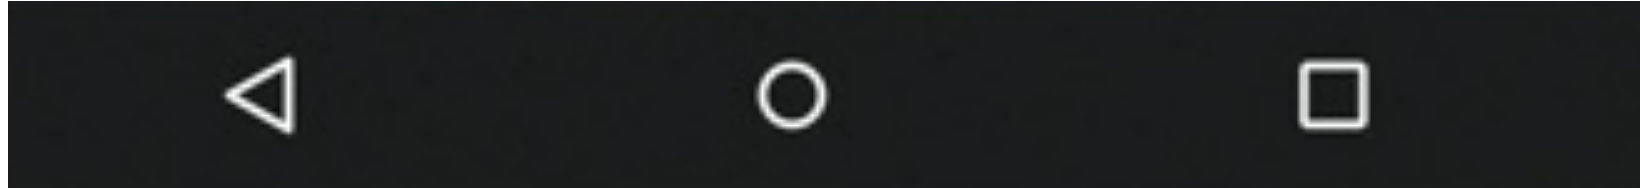

At the bottom of your screen you will always see these three buttons. These are your navigation buttons. They do the following:


Triangle: This is the back button. It takes you back one single action.

Circle: Takes you back to your “home screen”

Square: Shows all recently used apps.

Settings

One of the apps you will see on your home page is your “settings” app. This app lets you make changes to your device.

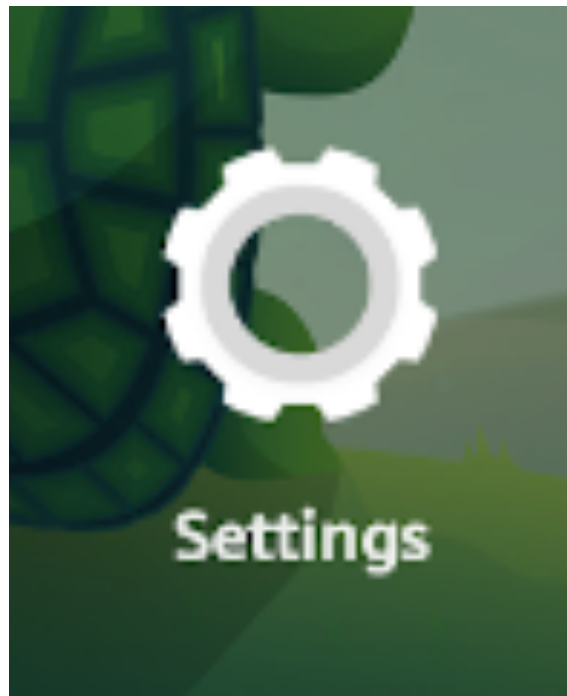


Settings Continued...

Here you can make changes to your:

- **Wireless connection**
- **Apps**
- **Display settings**
- **And More**

By clicking on an area you would like to adjust. If you would like to learn more about adjusting your settings you should do so with a Cyber-Seniors mentor.

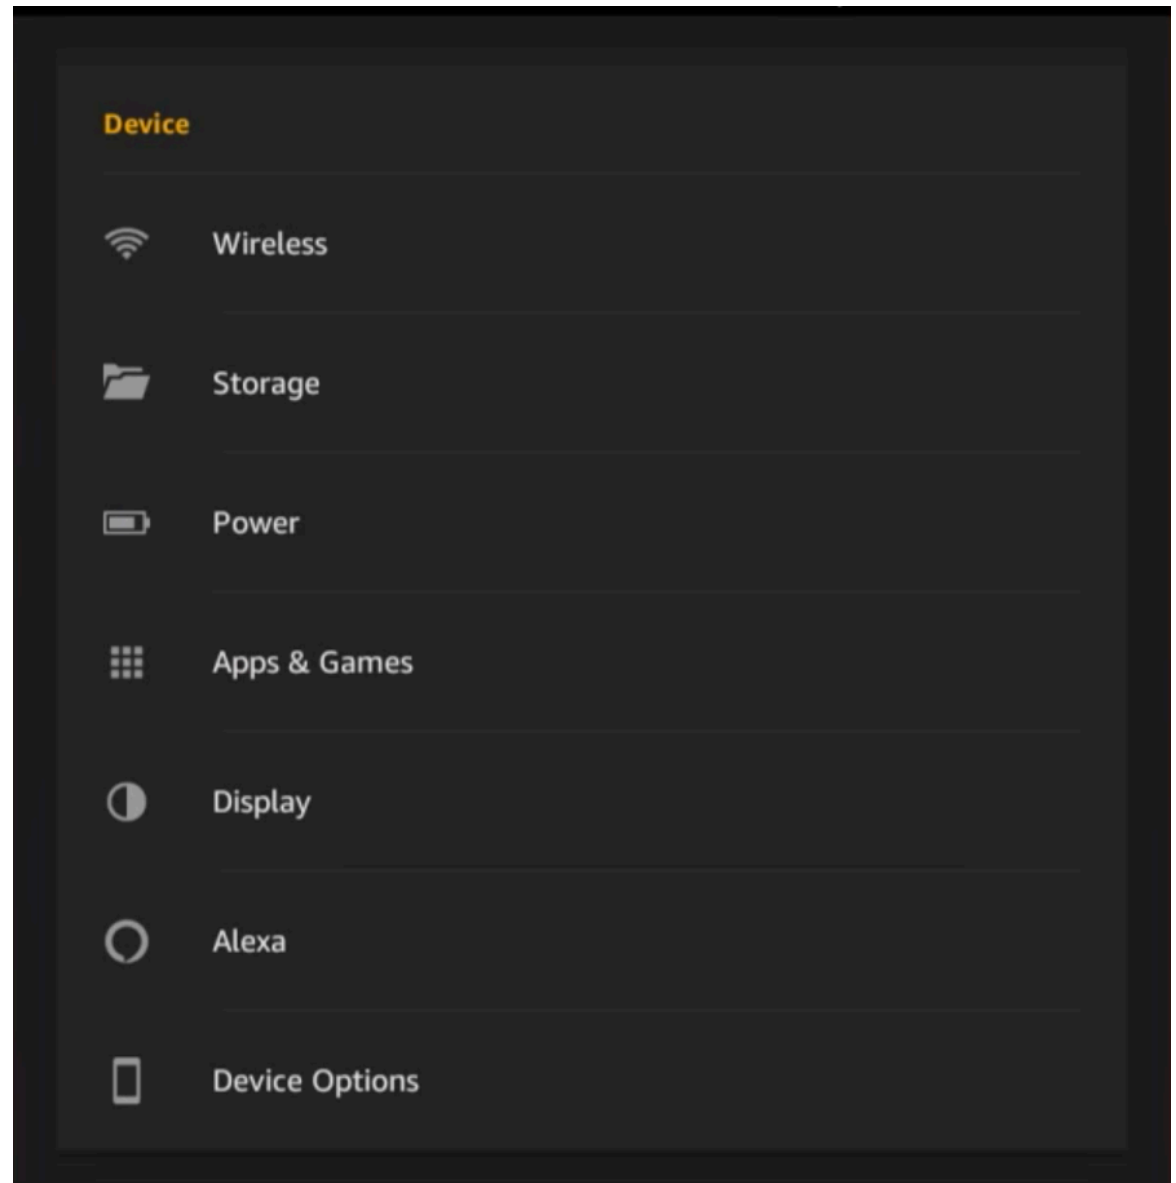

Quick Settings

If you place a finger at the very top of your screen and swipe down you will reveal this quick menu.

- You can do things like adjust the brightness using the slider.
- Lock your screen in a certain orientation with “Portrait”
- And access your Camera

